


# WIRING DIAGRAM

## VEHICLE PLUG WIRING

1. YELLOW : LH FLASHER
2. BLACK : 12V FROM BATTERY (BLACK 25-40AMP 12V SUPPLY)
3. WHITE : EARTH
4. GREEN : RH FLASHER
5. BLUE : BRAKE CONTROLLER (OUTPUT FROM IN-CAB CONTROLLER)
6. RED : STOP LAMP
7. BROWN : TAIL LAMPS

FOR FULL PRODUCT MANUAL AND WARRANTY INFORMATION, GO TO [HYDRAPRO.COM.AU](http://HYDRAPRO.COM.AU) UNDER "RESOURCES" AT THE BOTTOM OF THE PAGE.

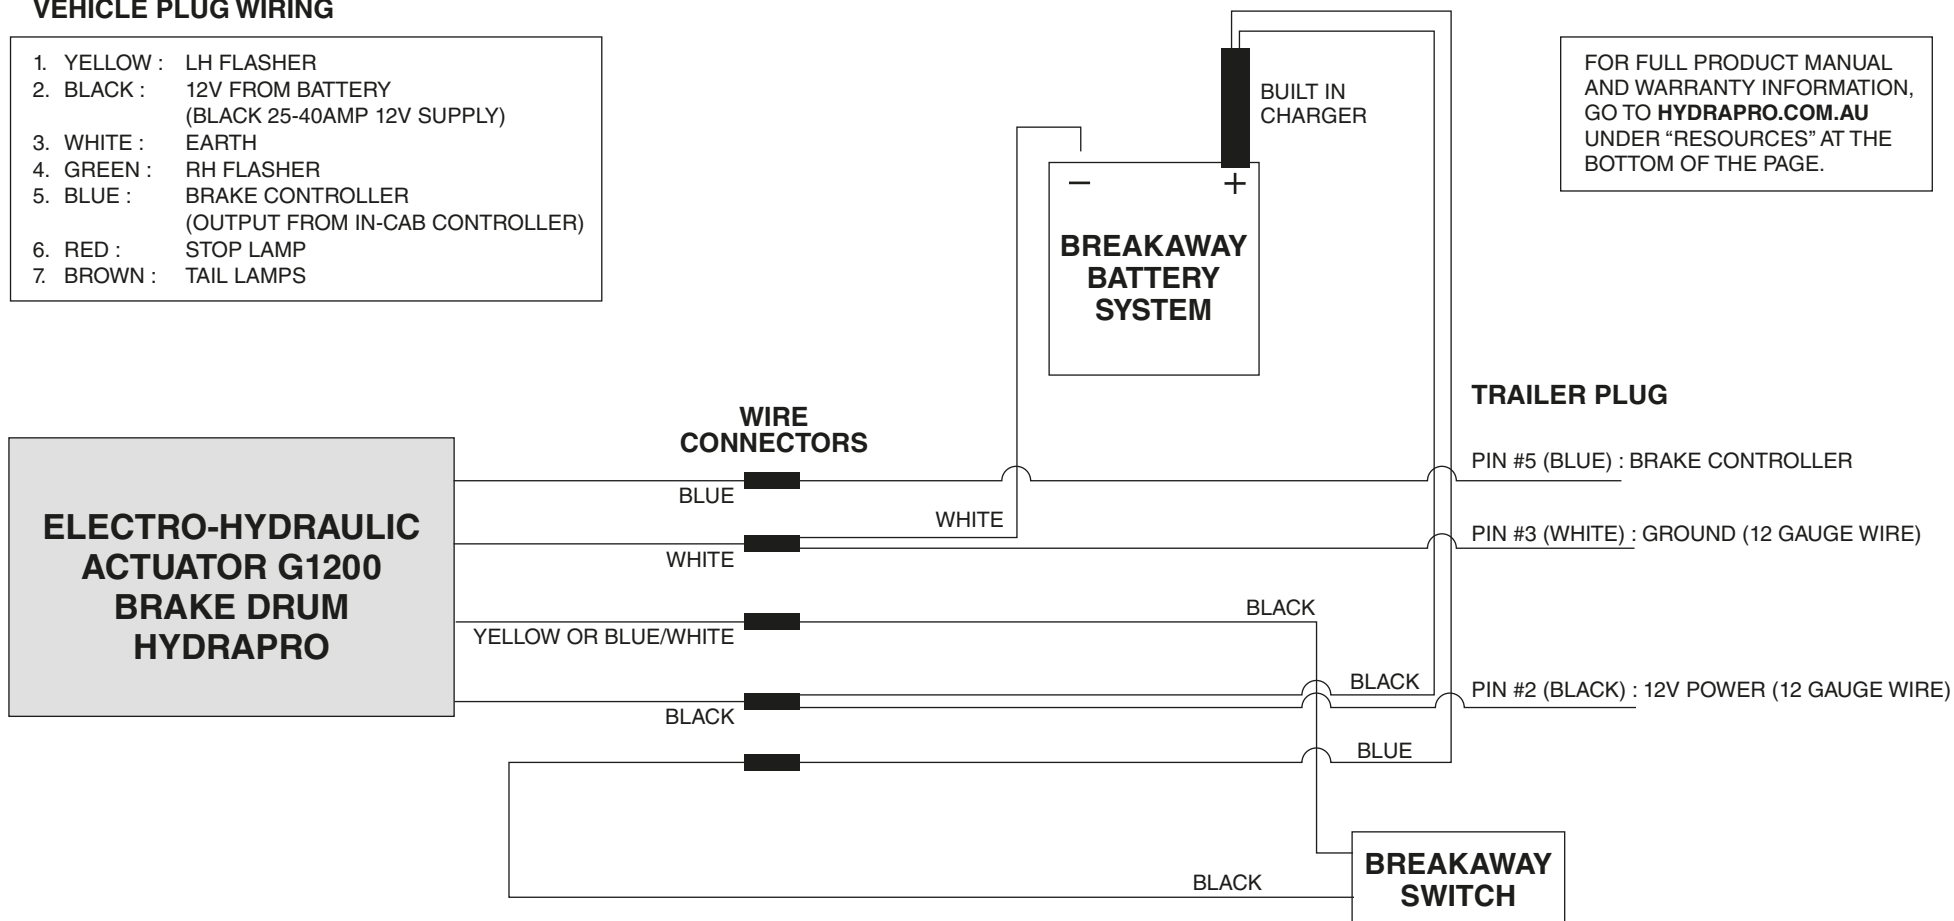

## PLEASE NOTE :

1. VEHICLE WIRING FOR BLACK, WHITE AND BLUE MUST BE WIRED AS STATED FOR THE UNIT TO OPERATE CORRECTLY.
2. IN COLD TEMPERATURES THE UNIT REQUIRES UP TO 40AMPS.
3. THIS WIRING DIAGRAM IS COMMON TO MOST BREAKAWAY SYSTEMS BUT PLEASE CHECK WITH THE MANUFACTURE'S SPECIFICATIONS.