


# INSTALLATION INSTRUCTIONS

**⚠ WARNING: DO NOT EXCEED PRODUCT RATING OR TOW VEHICLE LAMP LOAD RATING, WHICHEVER IS LOWER**

## APPLICATIONS

| Make | Model                            |
|------|----------------------------------|
| Kia  | Rondo (excluding LED taillights) |
| Kia  | Soul (excluding LED taillights)  |

## CUSTOM WIRING HARNESS

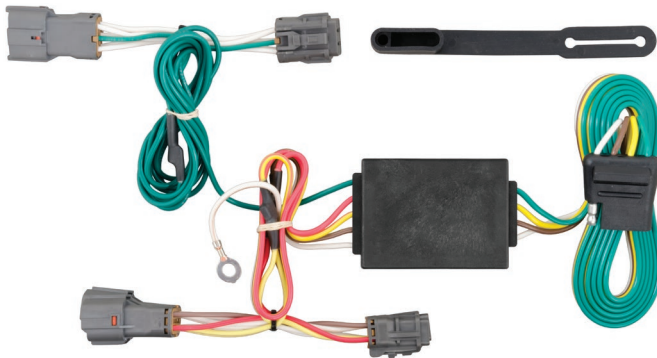

## ⚠ WARNING ⚠ ⚡

Exceeding the product rating can cause loss of warranty, overheating and potential fire. Do not exceed product rating or tow vehicle lamp load rating, whichever is lower.

Signal Circuits - 3.0 amps per side  
Tail / Running Circuits - 5.0 amps total

Check vehicle owner's manual or contact the vehicle manufacturer for more information.

## WIRING LOCATION GUIDE

### PASSENGER CARS (P)

Representative vehicle shown below

P1 - Behind driver side taillight housing, outside of trunk

P2 - Behind passenger side taillight housing, outside of trunk



### SUVS, MINI & FULL-SIZED VANS (S)

Representative vehicle shown below

S1 - Behind driver side taillight housing

S2 - Behind passenger side taillight housing



## NOTICE

All steps must be followed to ensure the wiring harness will function properly. Once installed, test for proper function by using a test light or connecting a properly wired trailer.

## TOOLS NEEDED

10mm socket  
Ratchet

Phillips screwdriver